
CEE NEO
Stecker und Kupplungen

Diese Kurzanleitung beschreibt die sichere und sachgerechte Montage und Handhabung der Steckvorrich-tungen. Die ausführliche Montage- und Bedienungsanleitung finden Sie zum Download unter folgender Adresse: **www.walther-electric.de**

Mitgelieferte Dokumente
Diese Kurzanleitung ist Bestandteil der Lieferung.

Sicherheit
Grundvoraussetzung für sicheres Arbeiten ist die Einhaltung aller angegebenen Sicherheitshinweise und Handlungsanweisungen in dieser Anleitung. Darüber hinaus gelten die örtlichen Unfallverhütungsvorschriften.

Anforderungen an die Montage
Der Betreiber ist für die bestimmungsgemäße Verwendung und den sicheren Gebrauch der Steckvorrichtungen verantwortlich.



Für die Installation ist elektrotechnisches Fachwissen erforderlich
- ▶ Installation nur durch Fachmann (IEC 60417-6182).

Bestimmungsgemäße Verwendung
Die Stecker und Kupplungen dienen als Steckvorrichtungen und sind im Innen- und Außenbereich einsetzbar. Es dürfen nur Stecker und Kupplungen mit einer Schutzart verwendet werden, die der am Einsatzort geforderten Schutzart entsprechen.

Vorhersehbare Fehlanwendung
Nichtbeachtung der geforderten Schutzart
Einsatz einer Steckvorrichtung mit niedrigerer Schutzart als am Einsatzort gefordert.
- ▶ Steckvorrichtungen dürfen nur entsprechend ihrer Schutzart am Einsatzort verwendet werden.

Restrisiken
Lagerung: Unsachgemäße Lagerung wie Druckbelastung, hohe Feuchtigkeit und erhöhte Temperaturen können zur Deformation der Geräte führen. Lagerung bei -20 °C bis +35 °C.

Verletzungsgefahr durch Brand
Durch Abdecken der Stecker und Kupplungen kann es zu Wärmestau im Gehäuse kommen, wodurch ein Brand entstehen kann.
- ▶ Stecker und Kupplungen nicht mit anderen Gegenständen bedecken.

Tod oder Verletzungsgefahr durch unsachgemäßer Bedienung
- ▶ Verbraucher nur am Stecker aus der Steckdose herausziehen, niemals am Netzkabel.
- ▶ Defekte Stecker und Kupplungen von einer Elektrofachkraft ersetzen lassen.
- ▶ Anschluss- und Verlängerungsleitungen nicht knicken, einklemmen oder überfahren.

CEE NEO
Plugs and sockets

This quick start guide describes how to install and handle plug connections safely and correctly.
You can download more detailed installation and operating instructions from the following website: **www.walther-electric.de**

Documents supplied
This quick start guide forms part of delivery.

Safety
The basic prerequisite for safe working is compliance with all the safety and handling instructions stated in this manual. Furthermore, the local accident prevention regulations are also applicable.

Installation requirements
The operating company is responsible for the proper use and safe use of the connections.



Specialist electrical knowledge is necessary for the installation.
- ▶ Installation to be performed only by a skilled electrician (IEC 60417-6182).

Intended use
The plugs and connectors act as connections and are suitable for use both indoors and outdoors.
Only those plugs and connectors whose protection class complies with the required degree of protection at the site of installation may be used.

Foreseeable misuse
Non-observance of required protection class
The use of a connection with a lower protection class than that required at the site of installation.
- ▶ Only connections with the corresponding protection class should be used at the site of installation.

Residual risks
Storage: Improper storage, such as pressure load, high humidity and high temperatures, can lead to deformation of the devices. Storage at -20 °C to +35 °C.


Risk of injury caused by fire
Covering the plugs and connectors can cause heat to build up inside the enclosure which can result in fire.
- ▶ Do not cover the plugs and connectors with any other objects.

Death or risk of injury through improper use
- ▶ Pull on the plug, not the mains cable, when disconnecting from the socket.
- ▶ Defective plugs and connectors must be replaced by a qualified electrician.
- ▶ Do not bend, pinch or run over connection cables and extension cables.

WALTHER ELECTRIC GmbH
Ramsener Str. 6, D-67304 Eisenberg


Montage/Assembly Stecker/Plug FW231(3+4+5)(01-12) CC Classic
Montage/Assembly Kupplung/Coupler FW331(3+4+5)(01-12) CC Classic


1

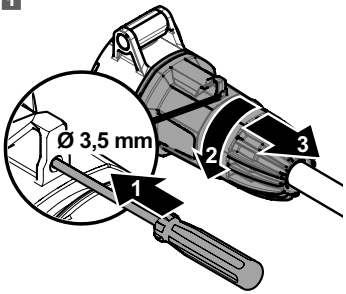


2

3P: 9,6 - 18 mm
4P: 10,7 - 20 mm
5P: 11,9 - 22,2 mm

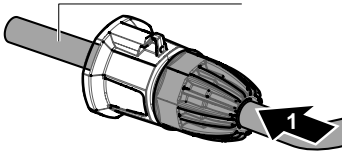





3

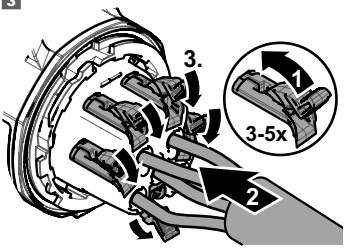


4

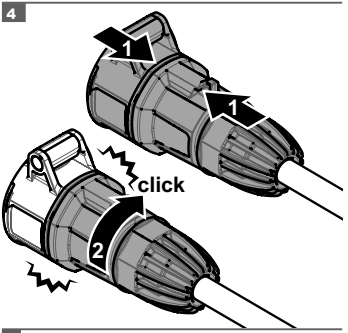

5

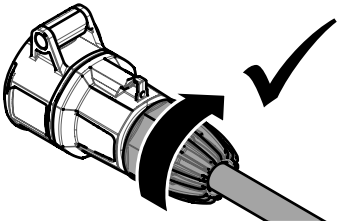

Schlüsselweite/Wrench size 58
Minimum 6 Nm



WALTHER ELECTRIC GmbH
Ramsener Str. 6, D-67304 Eisenberg